



KTM SXF FUEL TANK 12 LT


SERBATOIO 12 LT KTM SXF

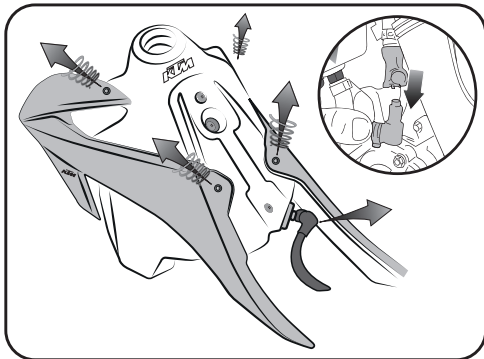


COD. 500006012

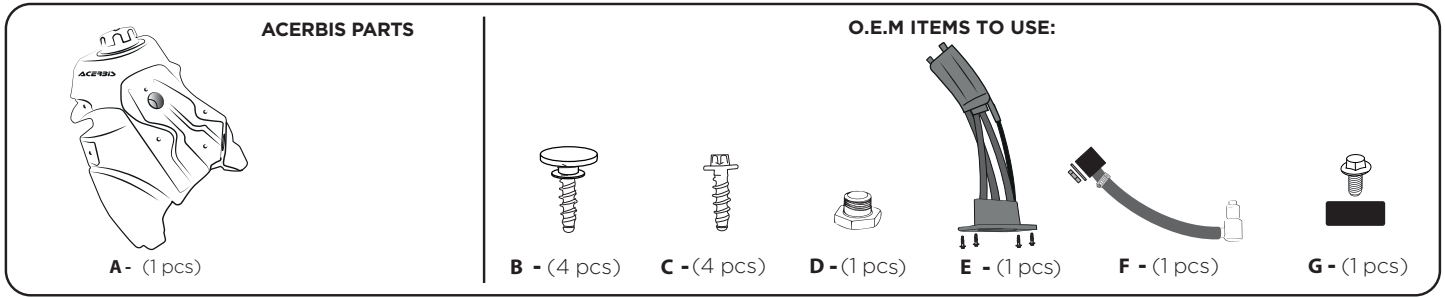


1. Remove the radiator scoops. Disconnect the fuel pump cover cable and the fuel connector as indicated in the diagram.
Togliere i fianchetti. Sconnettere il cavo di alimentazione della pompa. Scollegare connettore benzina.

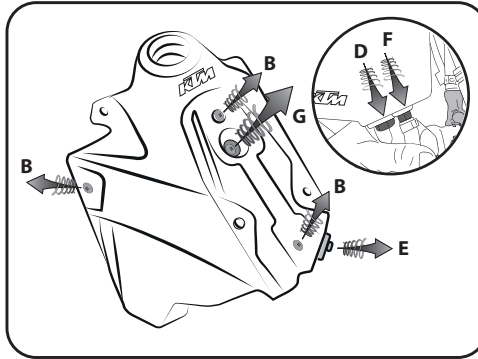


2. Remove seat screw (B) and the screws on the side. Remove the tank screw (G), then empty any remaining fuel from the tank. Remove the (D/E/F) fasteners and remove the fuel pump.
Togliere le viti (B) della sella, e degli attacchi laterali. Togliere la vite del serbatoio (G). Svuotare completamente la benzina dal serbatoio e rimuovere le utenze (D/E/F).

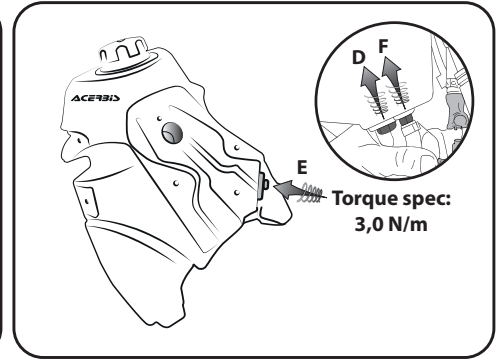


3. On the fuel tank Acerbis (A), reconnect the fuel pump (E) with the original screws/hardware.
Sul serbatoio Acerbis, rimontare la pompa (E) e le utenze (D/F).
Torque spec: 3,0 N/m

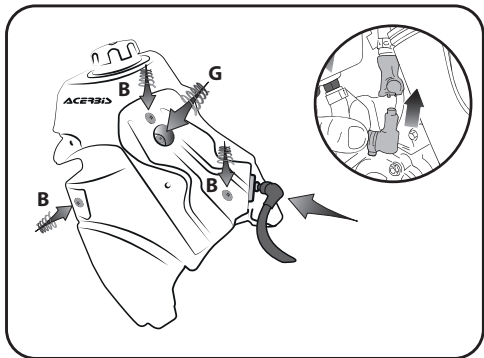

4. Place the Acerbis fuel tank (A) on the bike. Insert the tank and seat screws (G/B) as indicated in the diagram. Reconnect the fuel pump power cable and the fuel connector.
Posizionare il serbatoio Acerbis sulla moto. Riavvitare la vite serbatoio (G). Rimettere le viti (B) della sella e degli attacchi laterali. Connettere il cavo di alimentazione della pompa e il connettore benzina.

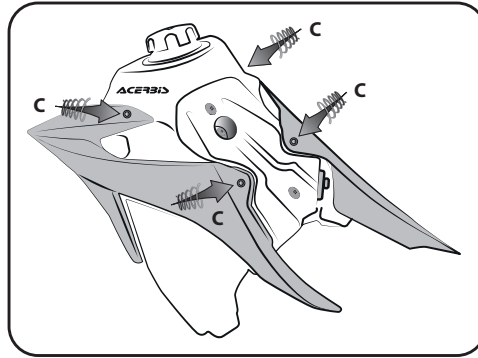

5. Assemble the radiator scoops with the screws (C).
Montare i fianchetti con le viti (C).

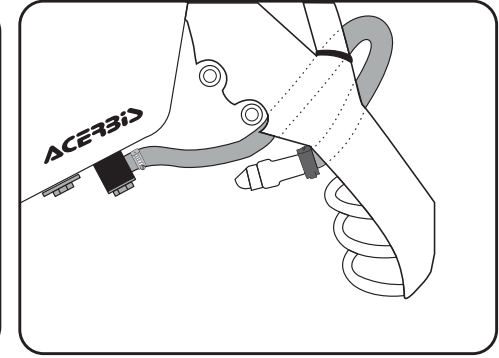

6. ATTENTION: fuel line assembly detail.
ATTENZIONE: dettaglio montaggio tubo/pompa.
Attach the KTM fuel line (F) to the Acerbis tank (A) as indicated in the diagram. Make sure the fuel line isn't folded over, obstructing the fuel flow.
Fissare il tubo pompa come indicato. Fare attenzione che il tubo piegandosi non crei strozzature.

KTM SXF FUEL TANK 12 LT

SERBATOIO 12 LT KTM SXF



COD. 500006012

DISCLAIMER:

DISCLAIMER: Due to uncontrolled variables in the manufacturing process of rotationally molded fuel tanks, the fuel tank may vary in size and shape by up to 7% of the manufacturer's original listed capacity.

LIBERATORIA

LIBERATORIA: A causa di variabili inponderabili nel processo di stampaggio rotazionale dei serbatoi, questi possono differire in forma e dimensioni fino al 7% rispetto alla capacità dichiarata.

FOR COMPETITION USE ONLY
SOLO PER USO AGONISTICO



Thank you for purchasing an ACERBIS fuel tank

WARNING

It is **EXTREMELY IMPORTANT** that the fuel tank be properly installed. To ensure proper installation, it is **STRONGLY RECOMMENDED** that the tank be installed only by a qualified OEM licensed dealership mechanic. Improper installation could result in serious injury or even death.

If self-installed NOTE THE FOLLOWING. Particular attention must be paid to excessive fuel line length and fuel line proximity to hot engine areas and pipes to prevent fire.

Clean tank interior thoroughly before installation. Install this fuel tank only in a well ventilated area, as gasoline fumes are extremely dangerous. Do not start or operate the vehicle if there are any fuel leaks! Read all instruction first before beginning installation.

DISCLAIMER

Due to uncontrolled variables in the manufacturing process of rotationally molded fuel tanks, the fuel tank may vary in size and shape by up to 7% of the manufacturer's original listed capacity.